
SC-519


- * Please be sure to read before installing product.
- * Do not dispose installation sheet, instead, please pass it to product user.

KAWAJUN www. kawa jun. co. jp


Installation Procedure

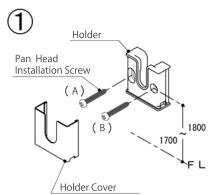


- 1. Install Holder to wall using the provided Pan Head Installation Screws (A first, B second).
- 2. Clasp Holder Cover onto Holder.

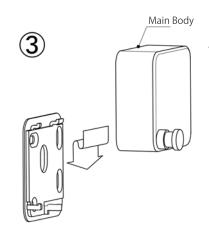

1. Slide Main Body onto Connector from the top.

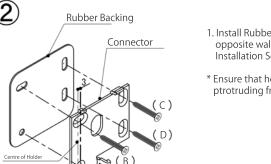

- Install Rubber Backing and Connector onto the opposite wall using the provided Flat Head Installation Screws (A first, B second, C third, D fourth).
- * Ensure that head of Installation Screws are not ptrotruding from Connector.

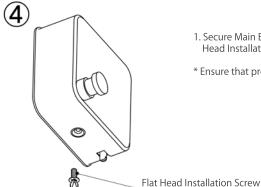

- 1. Secure Main Body to Connector with M3 Flat Head Installation Screw.
- * Ensure that product is securely installed.



Reinforced Wall

50 x 100mm (Recommended)

Side View

Floor

വ

45.

Vertical Bar

Flat head Installation Screw

Vertical Bar

1700

1800




A Caution: About installation

- * Ensure that product is securely installed on reinforced walls.
- * If installing on concrete walls, insert provided Anchor Plugs into holes (ø6 x 40).
- * Ensure that all installation screws do not protrude out.
- * Install product in a place where children are not able to reach.


A Caution: About product usage

- * The load capacity for this product is 5 kgf. Do not load heavier than the stated load capacity.
- * Ensure rope is locked in place when in usage.
- * Maximum length of rope is 2.7m.
- * Do not hang items other than clothing onto product.
- * Do not use gasoline (Benzene), thinner, aocohol, or acidic/alkaline based detergent to clean the product.
- * Ensure that children do not with product as they may injure themselves.



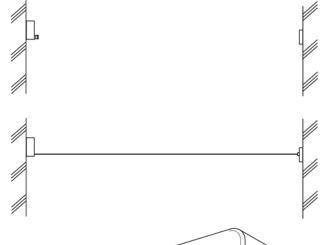


Pull Knob out from Main Body and hook it into U-channel of Holder Cover.

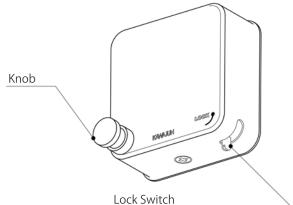

Engage Lock Switch when Laundry Rope

- * Rope will automatically retract when pulled out.
- * Rope will slack when in use for the first time.
- * Ensure that Lock Switch is engaged when in use. Mechanism will be damaged if Lock Switch if off when there is a load on it.

Flip Lock Switch upwards when in use.

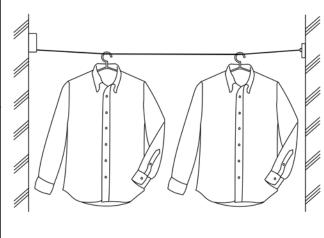

Hang wet laundry to dry.

* Estimated weight of wet laundry (per piece)

T-shirt: 250g Shirt: 250g Sweater: 900g Face towel: 150g Bath towel: 400g

OHow To Retract

- 1. Ensure there is nothing hanging on rope.
- 2. Disengage Lock Switch.
- 3. Remove Knob and hold it gently as mechanism retracts it.