
## Paper Holder Installation Instruction Sheet

# SA-483

- \* Please be sure to read before installing product.
- \* Do not dispose the installation sheet after installation, instead please pass it to the product user.

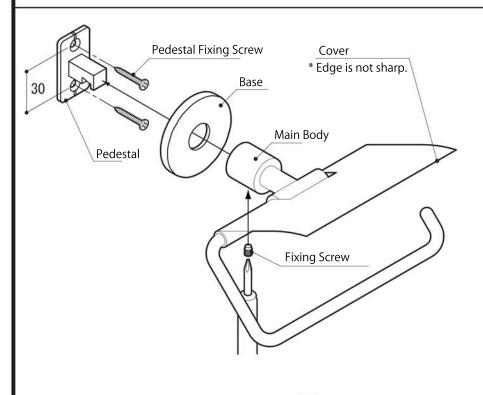

Arm Standard

Direction

**Arm Fixing Screw** 

Allen Key (S2)

#### Installation Procedure


- 1. Install Pedestal to wall using the provided Pedestal Fixing Screw.
- 2. Fix Base and Main Body onto Pedestal and secure with Fixing Screw.

### ⚠ Caution: About installation

- \* If product is to be installed on boards, please ensure it is at least 9mm thick.
- \*\* Do not install product onto non-reinforced walls.
- \* Do not install product on ALC or in spaces between concrete blocks.
- \* After installation, please check to ensure product has been installed properly. If product has not been installed properly, it may wobble and drop off.
- \* Do not install product where rain may get to it, or in areas with very high temperature. It may damage the product and cause it to drop off.

## ⚠ Caution: About product usage

- \* The load capacity for this product is 5kgf. Do not load heavier than the stated load capacity. Product failure may result in injury.
- \* Do not use product for unintended purpose or application. Product failure may result in injury.
- \* Do not use gasoline (Benzene), thinner, alcohol, acidic/alkaline based detergent and/or cleanser to clean the product.



- Changing Arm Direction (Insert toilet paper from left side)
- Unscrew Arm Fixing Screw using an Allen Key (S2) to separate Arm from Main Body and Cover.
- 2. Flip it to change its direction and reinstall it.

Opposite

**KAWAJUN** www. kawajun. co. jp No. 002