

Grab Bar Installation Instruction Sheet

KH-50

* Please be sure to read before installing product.
* Do not dispose the installation sheet after installation, instead please pass it to the product user.

© Installation Procedure

1. Install Pedestal to wall using the provided Spring Washers and Installation Screws.
2. Secure Grab Bar to Pedestal with Fixing Screws.



⚠ Caution: About installation

- * If installing on plaster boards, please ensure it is at least 12mm thick.
- ** Do not install product on non-reinforced walls.
- * After installation, please check to ensure product has been securely installed.
- * This product is for indoor usage only. As it is not waterproof, please do not install it outdoor or in places that has a high humidity level. It may lead to corrosion and result in parts falling out and causing injury.

⚠ Caution: About product usage

- * Load capacity for this product is 60kgf. Do not load heavier than the stated load capacity. Product failure may result in injury.
- * Do not use product for unintended purpose or application. Product failure may result in injury.

Cross Section

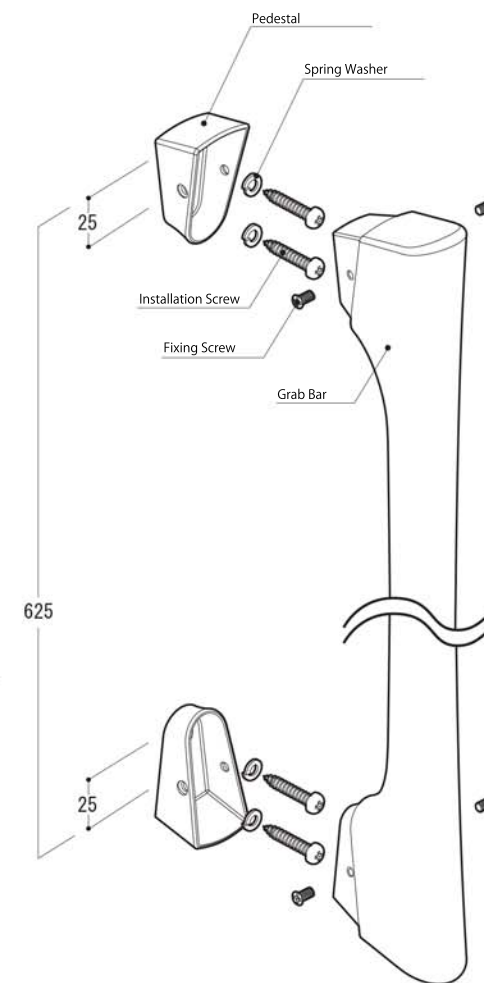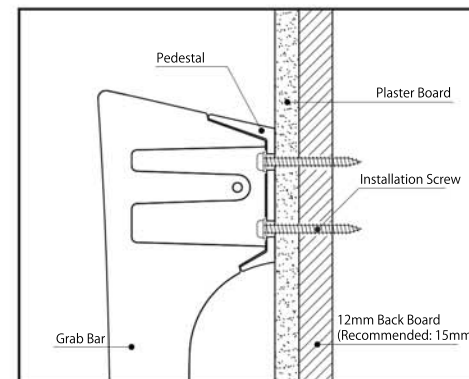

KAWAJUN
www.kawajun.co.jp

NO. 001