# Sanitary Accessory Installation Instruction Sheet

# SC-363 (Paper Holder)

#### Safety Warning

- \* Please be sure to read "Safety Warning" before installation to ensure product will be installed properly.

  \* Customers who have purchased this product from the online shop should read the attached "Disclaimers and Warranties" and "Precautions" before installation.
- \* Do not dispose the installation sheet after installation, instead please pass it to the product user.
- \* Pass all tools that have been provided to product user. ■ The following displays shows the levels of harm or damage if product is not installed properly.



Marning This display warns the possibility of death or serious injury.



This display warns the possibility of injury or possibility of

■ The following symbols shows the precautions that needs to be observed.



This symbol is used to identify prohibited actions that must not be carried out.




This symbol is used to identify mandatory actions that must be carried out.

## △Warning About installation

Please do not install product onto non-reinforced walls. Product may fall off and result in injury.

- \* Installers can fix a 9mm or thicker plywood, or something, solid behind the product.
- \* Installers can Tix a 9mm or tricker plywood, or sometime, some behind the product may not be installed stably on lightweight metal. As a precaution, please reinforce it with a wooden plank.
  - \* Do not install product on ALC (Autoclaved lightweight concrete), lightweight metal, or spaces between concrete blocks.





After installation, please check to ensure product has been installed properly. After installation, please cneck to ensure product has been installed properly. it may wobble and drop off, resulting in injuries.

#### △Warning About product usage

- Do not use product for unintended purpose or application. Product failure may result in injury.
- O not load heavier than the stated load capacity. Product failure may result in injury.
- O not apply excessive force onto product. Product failure may occur and lead to injury.

#### ACaution About product maintenance

Wipe away any stain of cosmetic or chemical product when found. Leaving stains on product may lead to discolouration, corrosion and/or deterioration and result in breakage and injury.

Wipe with a soft, damp cloth. When necessary, wipe a damp cloth with mild detergent and finish with a soft, dry cloth. Do not use gasoline (Benzene), thinner, alcohol, or acidic/alkaline based detergent and/or cleanser to clean the product.


This product was designed according to JIS standards. Do note that toilet papers that were not manufactures according to JIS standards may not fit into this product.

# **Product Specification**

Type Product Code Material **Product Dimension** 

Load Capacity

Paper Holder SC-363 Zinc Die Casting 135.5 x 78 x 64mm 49N (5kgf)

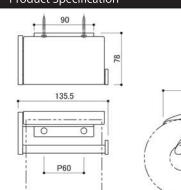

### Package Contents









Main Body x 1

Installation Sheet x 1


Installation Screw x 2

Spring Washer x 2

## Installation Procedure

#### O Installation Procedure


1. Install Main Body to wall using the provided Spring Washers and Installation Screws.

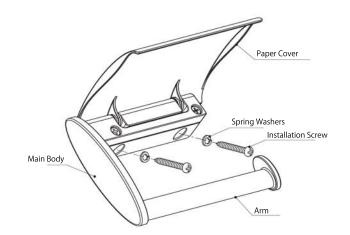


O Changing Arm Direction

1. Unscrew Arm Fixing Screws to remove Arm.

2. Turn Arm and re-install with Arm Fixing Screws.

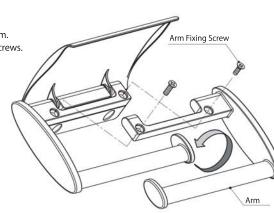

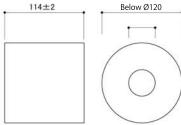

Recommended toilet paper dimension (JIS standard)



NO.001